

 
 
The information contained in this publication was correct at the time of going to print. In the interest of development the right is reserved to change specifications, design or equipment at any time without notice and without incurring any obligations. This publication, or part thereof, may not be reproduced nor translated without our approval. Errors and omissions excepted.

BLUETOOTH is a trademark owned by Bluetooth SIG, Inc, U.S.A. and used by Ford Motor Company under license.

(c) Ford Motor Company 2006

All rights reserved

Order Code: CG3504en 01/2006



Contents

Introduction	2
General Information	3
Audio Unit without a Navigation System	7
Audio/Navigation System TravelPilot EX	10
Audio/Navigation System with Touch-Screen	13
Voice Control	16
Glossary	40
Declaration of Conformity	41
Index	42

Introduction

This guide describes the functions and features of the Bluetooth[®] mobile phone and Voice Control system fitted to certain Ford vehicles.

The guide covers the following variations:

- A mobile phone with a mobile phone cradle without Voice Control.
- A Bluetooth and Voice Control system with a mobile phone cradle.
- A Bluetooth and Voice Control system without a mobile phone cradle.

The Bluetooth mobile phone part of the system provides interaction with the audio or navigation system, and your mobile phone. It allows you to use the audio or navigation system to make and receive calls without having to use your mobile phone.

The Voice Control part of the system can be used to control:

- mobile phone calls,
- audio system functions,
- navigation system functions,
- vehicle climate control functions.

The mobile phone does not switch off immediately after the ignition key is turned off: the power down delay is preset to 10 minutes. The time period can be adjusted to between 0 and 60 minutes. This, depending on your mobile phone, can be achieved by creating a phonebook entry on your mobile phone with the name 'Timer' and the required delay as it's number.

Note: If the Bluetooth and Voice Control is used for an extended period of time when the vehicle is stationary, make sure that the engine is running too avoid draining the battery.

General Information

HANDLING OF PHONES

A phone can be connected to the vehicle system by using either a cradle connection or a Bluetooth connection.

On vehicles with a mobile phone cradle, up to five Bluetooth phones can be bonded to the vehicle system.

On vehicles without a mobile phone cradle, up to six Bluetooth phones can be bonded to the vehicle system.

Note: If there is an ongoing call when the phone in use is selected as the new active phone, the call is transferred to the vehicle audio system.

Note: Even if connected to the car system, your phone can still be used in the usual way.

Requirements For Cradle Connection

Your phone must be fitted in a mobile phone holder before it can be used as a cradle phone with your handsfree/Voice Control system. You will be able to purchase the correct holder for your phone from your Ford dealer.

Requirements For Bluetooth Connection

The following are required before a Bluetooth phone connection can be made.

1. The Bluetooth feature must be activated on the phone and on the audio unit.

Note: For additional information, refer to your phone user guide.

2. The 'private' mode must not be activated on the Bluetooth phone.
3. Search for audio device.
4. Select 'Ford Audio'.
5. The Bluetooth PIN number '0000' must be entered on the phone keypad.

Note: A phone call will be disconnected if the audio/navigation system is switched off. If the ignition key is turned to the off position the phone call will remain in progress.

Compatibility of Phones

The vehicle system supports mobile phones with the Bluetooth Handsfree function. The mobile phones which can be used with the mobile phone cradle are continuously being updated. For more information please contact your Ford dealer.

General Information

MOBILE PHONE SYSTEM OPERATION


How to place your phone in the mobile phone cradle

Note: Your phone must be fitted in a mobile phone holder to allow you to connect the phone to the cradle.

Connect your phone to the cradle.

1. Place the base of the phone in the cradle connection.

Note: Make sure that the phone is pushed fully rearwards in the cradle.

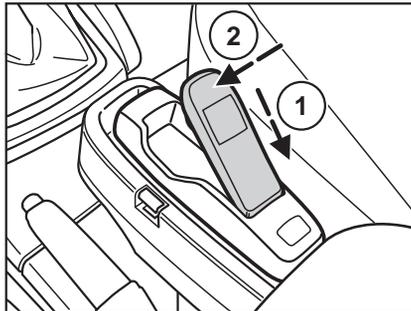

2. Push the phone downwards until a 'click' is heard.

Note: The connection to the system will be displayed on your phone.

Phonebook

After start up access to the phonebook can be delayed for up to 2 minutes.

Phonebook categories

Depending on your phonebook entry, different categories can be displayed in the audio or navigation unit.

For example:

- M = Mobile
- O = Office
- H = Home

The category can also be indicated as an icon.

Ending or rejecting calls

By pressing one of several function buttons on the Audio/Navigation unit (example: AM/FM,CD/AUX) active calls can be ended or incoming calls can be rejected.

General Information

Making a phone an active phone

When using the system for the first time, no phone is bonded to the system.

After switching on the ignition the cradle phone and the Bluetooth phone are recognized differently by the system.

Bluetooth phone

After bonding a Bluetooth phone to the system, this becomes the active phone.

However, in some cases the Bluetooth phone has to be activated by pressing the appropriate station button on the audio or navigation unit.

Turning the ignition back on again, the last active phone is picked up by the system.

Bond another Bluetooth phone

Note: Before another Bluetooth phone can be bonded, the existing active Bluetooth connection has to be deactivated by the mobile phone.

Bond a new Bluetooth phone as described in the requirements for a Bluetooth connection.

Phones stored in the system are accessible by using the phone list on the audio or navigation unit.

Note: If six (five Bluetooth phones for cradle phone system) Bluetooth phones have been bonded, one of these has to be deleted in order to bond a new phone.

Cradle phone

With your phone fitted in the mobile phone cradle this does not automatically become the active phone.


In these cases refer to 'Changing the active phone' in the appropriate section which describes the system fitted to your vehicle.

General Information

REMOTE CONTROL

One of several different types of remote control may be fitted to your vehicle:


Voice and mode button

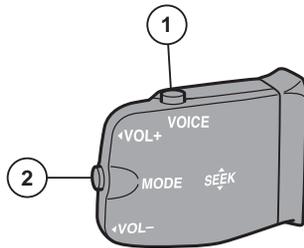

1. Voice button
2. Mode button

Incoming calls can be accepted by pressing the 'MODE' button once or ended by pressing twice.

Voice and accept/reject button

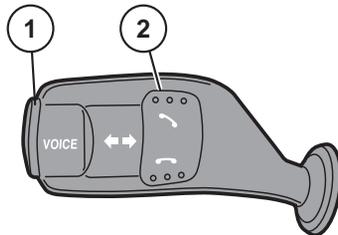


1. Voice button
2. Accept/Reject button


The 'VOICE' button is used to activate or switch off the Voice Control.

On vehicles with an 'ACCEPT/REJECT' button, phone calls can be accepted and rejected by pressing the appropriate button.

Mode button on the steering wheel

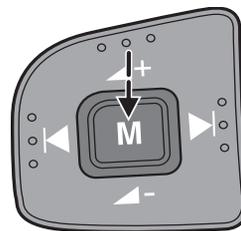

Mode button only

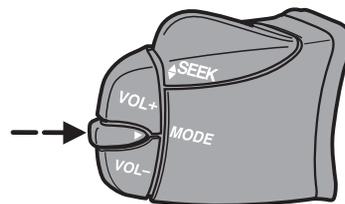

On vehicles without a 'VOICE' button, the 'MODE' button on the remote control is used to activate or switch off the Voice Control.

Note: You will not be able to use the 'MODE' button to activate the Voice Control during an incoming or active call.

Note: You will not be able to use the 'MODE' button to control the audio system.

Audio Unit without a Navigation System

This chapter describes the phone functions of the audio unit.

Note: Refer to your Audio guide for details of the controls.

An active phone must be present.

Even if connected to the Audio Unit, your phone can still be used in the usual way.

MAKING A CALL

Dialling a number

Cradle Phone

Using the phone in the cradle allows you to access your phone addressbook. The entries will appear in the audio unit display.

1. Press the 'PHONE' button on the audio unit.
2. Press the 'MENU' button
3. Select 'PHONEBOOK'.
4. Press the 'SEEK' buttons to select the desired phone number.

Note: Press and hold the seek button to skip to the next letter in the alphabet.

5. Press the 'PHONE' button on the audio unit to dial the desired phone number.
6. Press the 'MENU' button to exit.

Bluetooth Phone

Using the Bluetooth phone, phone numbers can be dialled by Voice Control, refer to the Voice Control chapter.

Ending a call

Calls can be ended by either:

- Pressing one of the following buttons on the audio unit: 'PHONE', 'CD', 'AM/FM', ON/OFF.
- Pressing the 'MODE' button on the remote control.
- Pressing the 'REJECT' button.

Redialling a number

Cradle Phone

1. Press the 'PHONE' button on the audio unit.
2. Press the 'MENU' button.
3. Select the 'CALL OUT' list or the 'CALL IN' list.
4. Press the 'SEEK' button on the audio unit.
5. Press the 'PHONE' button on the audio unit to dial the desired phone number.

Bluetooth Phone

1. Press the 'PHONE' button on the audio unit.
2. Press the 'MENU' button.
3. Select 'REDIAL LAST NUMBER'.
4. Press the 'PHONE' button on the audio unit to dial the phone number.

Audio Unit without a Navigation System

RECEIVING AN INCOMING CALL

Accepting an incoming call

Incoming calls can be accepted by either:

- Pressing the 'PHONE' button on the audio unit.
- Pressing the 'MODE' button the remote control.
- Pressing the 'ACCEPT' button

Rejecting an incoming call

Incoming calls can be rejected by either:

- Pressing the 'REJECT' button.
- Pressing the 'CD' button.
- Pressing the 'AM/FM' button.

Note: You cannot reject an incoming call using the remote control.

HANDLING A SECOND INCOMING CALL

Note: The second incoming call function must be activated in your phone.

If there is an incoming call, whilst there is an ongoing call, a 'beep' will be audible and you will have the option to end the active call and to accept the incoming call.

Accepting a second incoming call

Second incoming calls can be accepted by either:

- Pressing the 'ACCEPT' button.
- Pressing the 'MODE' button on the remote control.
- Pressing the 'PHONE' button on the audio unit.

Note: This will cancel the ongoing call.

Rejecting a second incoming call

Second incoming calls can be rejected by pressing either:

- Pressing the 'REJECT' button.
- Pressing the 'CD' button.
- Pressing the 'AM/FM' button.

Audio Unit without a Navigation System

CHANGING THE 'ACTIVE PHONE'

Note: Phones must be bonded to the system before they can be made active.

Using the station storage button

1. Press the 'PHONE' button on the audio unit.
2. Press the preset number required (using the station preset buttons 1 - 6).

Using the audio unit menu

1. Press the 'PHONE' button on the audio unit.
2. Press the 'MENU' button on the audio unit.
3. Select the 'ACTIVE PHONE' option on the audio unit.
4. Scroll through the different stored phones to change the active phone.

Note: After bonding a Bluetooth phone to the system, this becomes the active phone.

However, in some cases the Bluetooth phone has to be activated by pressing the appropriate station button on the audio or navigation unit.

DEBONDING A BONDED PHONE

A bonded phone can be deleted from the system at any time, unless a phone call is in progress.

1. Press the 'PHONE' button on the audio unit.
2. Press the 'MENU' button on the audio unit.
3. Select the 'DEBOND' option on the audio unit.
4. Scroll through the different phones by using the 'SEEK' buttons and select the phone to be debonded.

Audio/Navigation System TravelPilot EX

This chapter describes the phone functions of the Audio/Navigation System TravelPilot EX.

Note: Refer to your Audio/Navigation System TravelPilot EX guide for details of the controls.

An active phone must be present.

Even if connected to the Audio/Navigation System TravelPilot EX, your phone can still be used in the usual way.

MAKING A CALL

Dialling a number

Cradle Phone

Using the cradle phone allows you to access your mobile phone addressbook. The entries will appear in the TravelPilot EX display.

1. Press the 'PHONE' button on the audio unit.
2. Using the 'PHONEBOOK' option in the menu.
3. Choose one of the letter areas.
4. Turning the right rotary entry control, select the desired phone number.
5. By pressing the 'INFO' button the details of the phonebook entry can be displayed
6. Press the right rotary entry control button.

Bluetooth Phone

Using the Bluetooth phone, phone numbers can be dialled using Voice Control, refer to the Voice Control chapter.

Ending a call

Calls can be ended by either:

- Pressing the 'REJECT' button.
- Pressing the 'MODE' button on the remote switch.
- Pressing the 'POWER OFF' button on the Audio/Navigation system.
- Pressing the right rotary entry control button.

Redialling a number

Cradle Phone

1. Press the 'PHONE' button on the audio unit.
2. Press the 'MENU' button.
3. Select the 'CALL OUT' list, 'CALL IN' list or 'REDIAL'.
4. Press the 'PHONE' button on the audio unit to dial the desired phone number.

Bluetooth Phone

1. Press the 'PHONE' button on the audio unit.
2. Press the 'MENU' button.
3. Select 'REDIAL'.
4. Press the 'PHONE' button on the audio unit to dial the phone number.

Audio/Navigation System TravelPilot EX

HANDLING AN INCOMING CALL

Accepting an incoming call

Incoming calls can be accepted by either:

- Pressing the 'ACCEPT' button.
- Pressing the 'MODE' button on the remote control.
- Pressing the 'PHONE' button on the audio unit.
- Using the 'ACCEPT' option in the menu.

Rejecting an incoming call

Incoming calls can be rejected by either:

- Pressing the 'REJECT' button.
- Pressing one of the following buttons on the audio unit: 'CD', 'AM/FM'.
- Using the 'REJECT' option in the menu.

Note: You cannot reject an incoming call using the remote control 'MODE' button.

HANDLING A SECOND INCOMING CALL

Note: The second incoming call function must be activated in your phone.

If there is an incoming call, whilst there is an ongoing call, a 'beep' will be audible and you will have the option to end the active call and to accept the incoming call.

Accepting a second incoming call

Second incoming calls can be accepted by either:

- Pressing the 'ACCEPT' button.
- Pressing the 'MODE' button on the remote control.
- Pressing the 'PHONE' button on the audio unit.
- Using the 'ACCEPT' option in the menu.

Note: This will cancel the ongoing call.

Audio/Navigation System TravelPilot EX

Rejecting a second incoming call DEBONDING A BONDED PHONE

Second incoming calls can be rejected by pressing either:

- The 'REJECT' button.
- One of the following buttons on the audio unit: 'CD', 'AM/FM'.

CHANGING THE 'ACTIVE PHONE'

Note: Phones must be bonded to the system before they can be made active.

1. Press the 'PHONE' button on the audio unit.
2. Using the 'ACTIVE PHONE' option in the menu
3. Select 'ACTIVE PHONE' from the list using the preset buttons.

A bonded phone can be deleted from the system at any time, unless a phone call is in progress.

1. Press the 'PHONE' button on the audio unit.
2. Select the 'DEBOND' option in the menu.
3. Select the phone from the list by using the preset buttons.

Note: After bonding a Bluetooth phone to the system, this becomes the active phone.

However, in some cases the Bluetooth phone has to be activated by pressing the appropriate station button on the audio or navigation unit.

Audio/Navigation System with Touch-Screen

This chapter describes the phone functions of the Audio/Navigation System with Touch-Screen.

Note: Refer to your Audio/Navigation-System with Touch-Screen guide for details of the controls.

An active phone must be present.

Even if connected to the Audio/Navigation System with Touch-Screen, your phone can still be used in the usual way.

MAKING A CALL

Dialling a number

1. Press the 'PHONE' button on the audio/navigation system.
2. Enter the phone number and press the 'DIAL' icon on the Touch-Screen.
3. The audio system is muted.
4. The number is transferred to the active phone and the number dialled.
5. When the connection has been made your conversation can take place, using the vehicle microphone and audio speaker system.

Dialling a number from the phonebook

Cradle Phone

1. Press the 'PHONE' button on the audio/navigation system.
2. Press the 'PHONEBOOK' icon on the Touch-Screen.

You will then have the choice to either:

- Use the alphabetic keyboard and then scroll through the list to obtain the desired name/number.
- Press the 'ALL' icon on the Touch-Screen and then scroll through the list to obtain the desired name/number.

Bluetooth Phone

Using the Bluetooth phone, phone numbers can be dialled by using Voice Control.

Ending a call

Calls can be ended by either:

- Pressing the 'REJECT' button
- Using the 'REJECT' icon on the Touch-Screen.
- Pressing the 'MODE' button on the remote control.
- Pressing the 'POWER OFF' button on the audio/navigation system.

Audio/Navigation System with Touch-Screen

Redialling a number

Cradle Phone

1. Press the 'PHONE' button on the audio/navigation system.
2. Press the 'DIAL' icon on the Touch-Screen.
3. Select the 'CALL OUT <' list or the 'CALL IN >' list.

Bluetooth Phone

1. Press the 'PHONE' button on the audio/navigation system.
2. Press the 'DIAL' icon on the Touch-Screen.

Accepting an incoming call

Incoming calls can be accepted by either:

- Pressing the 'ACCEPT' button.
- Using the 'DIAL' icon on the Touch-Screen.
- Pressing the 'MODE' button on the remote control.
- Pressing the appropriate list entry.

REJECTING AN INCOMING CALL

Incoming calls can be rejected by either:

- Pressing the 'REJECT' button.
- Pressing the 'REJECT' icon on the Touch-Screen.

Note: You cannot reject an incoming call using the remote control.

HANDLING A SECOND INCOMING CALL

If there is an incoming call, whilst there is an ongoing call, a 'beep' will be audible and you will have the option to end the active call and accept the incoming call.

ACCEPTING A SECOND INCOMING CALL

Second incoming calls can be accepted by either:

- Pressing the 'ACCEPT' button
- Pressing the 'DIAL' icon on the Touch-Screen.
- Pressing the 'MODE' button on the remote control.

Note: This will cancel the ongoing call and accept the incoming call.

Audio/Navigation System with Touch-Screen

REJECTING A SECOND INCOMING CALL

- Pressing the 'REJECT' button.
- Pressing the 'REJECT' icon on the Touch-Screen.

Note: This will cancel the incoming call and allow you to continue with the ongoing call.

CHANGING THE 'ACTIVE PHONE'

Note: Phones must be bonded to the system before they can be made active.

1. Press the 'PHONE' button on the audio/navigation system.
2. Press the 'MENU' button.
3. Press the 'ACTIVE PHONE' icon. This will list the bonded phones.
4. Select the required phone to be the new 'ACTIVE PHONE'.

Note: If there is an ongoing call when the phone in use is selected as the new active phone, the call is transferred to the vehicle audio system.

DEBONDING A BONDED PHONE

A bonded phone can be deleted from the system memory at any time, unless a phone call is in progress.

Note: When a bonded phone has been deleted from the vehicle system the connection should also be deleted from the phone.

1. Press the 'PHONE' button.
2. Press the 'MENU' button.
3. Press the 'DELETE PHONE' icon. This will list the bonded phones.
4. Select the required phone to be deleted.

After bonding a Bluetooth phone to the system, this becomes the active phone.

However, in some cases the Bluetooth phone has to be activated by pressing the appropriate station button on the audio or navigation unit.

Turning the ignition back on again, the last active phone is picked up by the system.

READING AND WRITING SMS

Note: SMS is only available for cradle phones.

Access the SMS function:

1. Press the 'PHONE' button.
2. Press the 'MENU' button.
3. Press the 'SMS' button.
4. Press the 'READ' or 'WRITE' button.

Voice Control

GENERAL INFORMATIONS

Supported commands

The Voice Control allows you to control the following vehicle functions via your voice:

- Phone,
- Radio,
- CD Player,
- Climate Control,
- Navigation systems.

Note: The Voice Control system is language specific. If you require the system to operate in another language please consult your Ford dealer.

System Response

As you work through a voice session the system will prompt you with a 'BEEP' tone each time the system is ready to proceed.

Do not try to give any commands until the 'BEEP' tone has been heard. The Voice Control system will repeat each spoken command back to you.

If you are not sure how to continue say 'HELP' for assistance or 'CANCEL' if you do not wish to continue.

The 'HELP' function provides only a subset of the available voice commands. Detailed explanations of all possible voice commands can be found on the following pages

Voice Commands

All voice commands should be given using a natural speaking voice, as if speaking to a passenger or on the phone. Your voice level should be dependant on the surrounding noise level inside or outside the vehicle but do not shout.

You do not have to turn your head towards the microphone or the vehicle speakers.

Nametag

The nametag functionality can support the phone, audio and navigation features by using the 'STORE NAME' function.:

- Store up to 20 nametags per function.
- The average recording time for each nametag is approximately 2-3 seconds.

Voice Control

SYSTEM OPERATION

The order and content of the Voice Controls are given in the following lists.

The symbols used indicate the following:

	User says.
	System answers.
	indicates a number or stored nametag to be inserted by the user.

Short cuts

There are a number of voice command short cuts available, which allow you to control some vehicle features without having to follow the complete command menu.


These are:

- Phone: 'MOBILE NAME'¹, 'DIAL NUMBER', 'DIAL NAME', and 'REDIAL'.
- CD player: 'DISC' and 'TRACK'.
- Climate control: 'TEMPERATURE' and 'FAN'.
- Radio: 'TUNE NAME'.
- Navigation: 'ZOOM' and 'ROUTE SETTING'.

1) Only when the mobile phone is fitted with Bluetooth and Voice Control

Start communicating with the system

Before you can start 'talking' to the system you first have to press the 'VOICE' button or the 'MODE' button for each operation and wait until the system answers with a 'BEEP'.

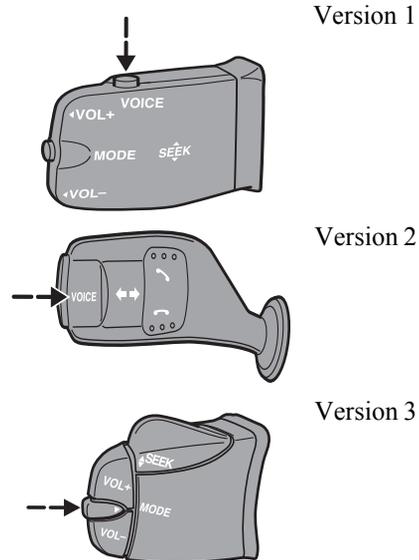

Voice Control

Phone

Your phone system allows you to create an additional phonebook. The stored entries can be dialed by Voice Control. Phone numbers stored by using Voice Control are stored on the vehicle system and not in your phone.

Overview

The overview shows the available voice commands of the phone system. The following lists will give further information about the complete command menu.

Overview

'PHONE'

- 'HELP'
- 'MOBILE NAME'^{a, b}
- 'DIAL NUMBER'^a
- 'DIAL NAME'^a
- 'DELETE NAME'
- 'DELETE DIRECTORY'
- 'PLAY DIRECTORY'
- 'STORE NAME'
- 'REDIAL'^a
- 'ACCEPT CALLS'
- 'REJECT CALLS'

a) Can be used as shortcut.

b) Only possible on mobiles which are connected by Bluetooth and fitted with Voice Control and stored name tags.

Voice Control

Create a phonebook

Store Name

New entries can be stored with the 'STORE NAME' command. This feature can be used to dial a number by calling up the name instead of the full phone number.

Steps	 USER	 System
1.	'PHONE'	'PHONE'
2.	'STORE NAME'	'STORE NAME' 'NAME PLEASE'
3.	'<name>'	'REPEAT NAME PLEASE'
4.	'<name>'	'STORING NAME' '<name> STORED' 'NUMBER PLEASE'
5.	'<phone number>'	'<phone number>'
6.	'STORE'	'STORING NUMBER' '<phone number>' 'NUMBER STORED'

Delete Name

Stored names can also be deleted from the directory.

Steps	 USER	 System
1.	'PHONE'	'PHONE'
2.	'DELETE NAME'	'NAME PLEASE'
3.	'<name>'	'DELETE <name>' 'CONFIRM YES OR NO'
4.	'YES'	'<name> DELETED'
	'NO'	'COMMAND CANCELLED'

Voice Control

Play Directory

Use this function to let the system tell you all stored entries.

Steps	 USER	 System
1.	'PHONE'	'PHONE'
2.	'PLAY DIRECTORY'	'PLAY DIRECTORY'

Delete Directory

This function allows you to delete all entries in one go.

Steps	 USER	 System
1.	'PHONE'	'PHONE'
2.	'DELETE DIRECTORY'	'DELETE DIRECTORY' 'CONFIRM YES OR NO'
3.	'YES'	'PHONE DIRECTORY DELETED'
	'NO'	'COMMAND CANCELLED'

Voice Control

Phone functions

Mobile name

This function allows you to access phone numbers stored with a nametag in your mobile phone.

Steps	 USER	 System
1.	'PHONE'	'PHONE'
2.	'MOBILE NAME' ^{a, b}	'MOBILE NAME' '<phone dependent dialogue>'

a)Can be used as shortcut.

b)Only when the mobile phone is fitted with Bluetooth and Voice Control (dependant on the mobile phone).

Dial Number

Phone numbers can be dialled after giving the nametag voice command.

Steps	 USER	 System
1.	'PHONE'	'PHONE'
2.	'DIAL NUMBER' ^a	'NUMBER PLEASE'
3.	'<phone number>'	'<phone number>' CONTINUE?'
4.	'DIAL'	'DIALING'
	'CORRECTION'	'<repeat last part of number>' CONTINUE?'

a)Can be used as shortcut.

Voice Control

Dial Name

Phone numbers can be dialed after giving the nametag voice command.

Steps	 USER	 System
1.	'PHONE'	'PHONE'
2.	'DIAL NAME' ^a	'NAME PLEASE'
3.	'<name>'	'DIAL <name>' 'CONFIRM YES OR NO'
4.	'YES'	'DIALING'
	'NO'	'COMMAND CANCELLED'

a)Can be used as shortcut.

Redial

This function allows you to redial the last dialled phone number.

Steps	 USER	 System
1.	'PHONE'	'PHONE'
2.	'REDIAL' ^a	'REDIAL' 'CONFIRM YES OR NO'
3.	'YES'	'DIALLING'
	'NO'	'COMMAND CANCELLED'

a)Can be used as shortcut.

Voice Control

DTMF (Tone dialling)

This function transfers spoken numbers into DTMF tones, i.e. to make a remote enquiry to your home answering machine. DTMF can only be used during an ongoing call.

Steps	 USER	 System
1.		'NUMBER PLEASE'
2.	'<numbers 1 to 9, zero, hash, star>'	

Main settings

Accept and reject calls

Calls can be accepted or rejected using the Voice Control.

Steps	 USER	 System
1.	'PHONE'	'PHONE'
2.	'ACCEPT CALLS'	'ACCEPT CALLS'
	'REJECT CALLS'	'REJECT CALLS'


Voice Control

CD Player/CD Changer

You can choose a disc or track directly by Voice Control.

Overview

The overview shows the available voice commands for operating your CD player. The following lists give further information about the complete command menu.

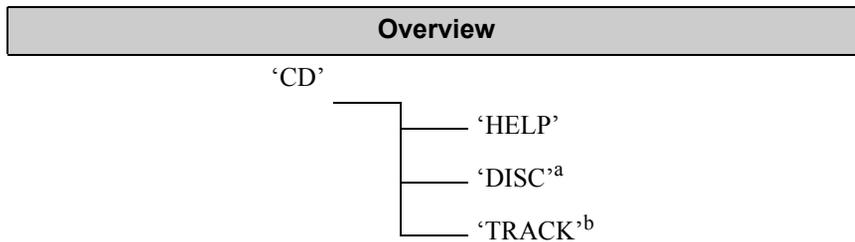

- a) Can only be used with a CD changer.
- b) Can be used as shortcut.

Disc

If you have a CD changer you can choose the disc number.

Steps	 USER	 System
1.	'CD'	'CD'
2.	'DISC' ^a	'DISC NUMBER PLEASE'
3.	'<a number between 1 and 6>'	'DISC <number>'

- a) Can be used as shortcut.

Track

You can also choose a track on your CD directly.

Steps	 USER	 System
1.	'CD'	'CD'
2.	'TRACK' ^a	'TRACK NUMBER PLEASE'
3.	'<a number between 1 and 99>'	'TRACK <number>'

- a) Can be used as shortcut.

Voice Control

Climate

The climate voice commands supports the functionality of the fan speed and the temperature settings.

Overview

The overview shows the available voice commands for the climate control system. The following lists give further information about the complete command menu.

Overview

'CLIMATE'

'HELP'

'FAN'^a

'TEMPERATURE'^a

'AUTO MODE'^a

a) Can be used as shortcut. On vehicles fitted with an 'English' language module the 'FAN' shortcut is not available.

Voice Control

Fan

This function allows you to adjust the fan speed.

Steps	 USER	 System
1.	'CLIMATE'	'CLIMATE'
2.	'FAN' ^a	'FAN SPEED PLEASE'
3.	'MINIMUM'	'FAN MINIMUM'
	'<a number between 1 and 7>'	'FAN <number>'
	'MAXIMUM'	'FAN MAXIMUM'

a) Can be used as shortcut. On vehicles fitted with an 'English' language module the 'FAN' shortcut is not available.

Defrosting/Demisting

Steps	 USER	 System
1.	'CLIMATE'	'CLIMATE'
2.	'DEFROSTING/DEMISTING ON' ^a	'DEFROSTING/DEMISTING ON'
	'DEFROSTING/DEMISTING OFF' ^a	'DEFROSTING/DEMISTING OFF'

a) Can be used as shortcut. On vehicles fitted with an 'English' language module the 'FAN' shortcut is not available.

Voice Control

Temperature

This function allows you to adjust the temperature.

Steps	 USER	 System
1.	'CLIMATE'	'CLIMATE'
2.	'TEMPERATURE' ^a	'TEMPERATURE PLEASE'
3.	'MINIMUM'	'TEMPERATURE MINIMUM'
	'<a number between 15 and 29 °C with 0.5 increments>' or '<a number between 59 and 84 °F>'	'TEMPERATURE <number>'
	'MAXIMUM'	'TEMPERATURE MAXIMUM'

a)Can be used as shortcut.

Auto Mode

Steps	 USER	 System
1.	'CLIMATE'	'CLIMATE'
2.	'AUTO MODE' ^a	'AUTO MODE'

a)Auto Mode can be deactivated by selecting a different temperature or fan speed.


Voice Control

Radio

The radio voice commands support the functionality of the radio and allow you to tune radio stations by Voice Control.

Overview

The overview shows the available voice commands for the radio. The following lists give further information about the complete command menu.

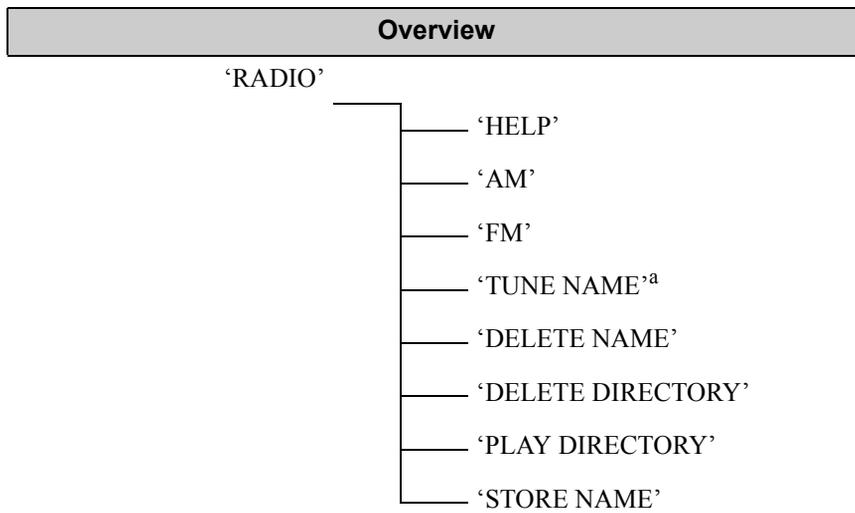

a)Can be used as shortcut.

Radio functions

Tune frequency

This function allows you to tune your radio by voice commands.

Steps	 USER	 System
1.	'RADIO'	'RADIO'
2.	'AM'	'FREQUENCY PLEASE'
	'FM'	'FREQUENCY PLEASE'
3.	'<frequency>'	'TUNE <frequency>'

Voice Control

Store name

If you have tuned a radio station, you can store it with a name in the directory.

Steps	 USER	 System
1.	'RADIO'	'RADIO'
2.	'STORE NAME'	'STORE NAME' 'NAME PLEASE'
3.	'<name>'	'REPEAT NAME PLEASE'
4.	'<name>'	'STORING NAME' '<name> STORED'

Tune name

This function allows you to call up a stored radio station.

Steps	 USER	 System
1.	'RADIO'	'RADIO'
2.	'TUNE NAME' ^a	'NAME PLEASE'
3.	'<name>'	'TUNE <name>'

a)Can be used as shortcut.

Delete name

This function allows you to delete a stored radio station.

Steps	 USER	 System
1.	'RADIO'	'RADIO'
2.	'DELETE NAME'	'NAME PLEASE'
3.	'<name>'	'DELETE <name>' 'CONFIRM YES OR NO'
4.	'YES'	'DELETED'
	'NO'	'COMMAND CANCELLED'

Voice Control

Play directory

This function allows you to let the system tell you all of the stored radio stations.

Steps	 USER	 System
1.	'RADIO'	'RADIO'
2.	'PLAY DIRECTORY'	'PLAY <DIRECTORY>'

Delete directory

This function allows you to delete all stored radio stations at once.

Steps	 USER	 System
1.	'RADIO'	'RADIO'
2.	'DELETE DIRECTORY'	'DELETE DIRECTORY' 'CONFIRM YES OR NO'
3.	'YES'	'RADIO DIRECTORY DELETED'
	'NO'	'COMMAND CANCELLED'

Voice Control

Navigation (only for Audio/Navigation System with Touch-Screen)

For detailed explanation regarding the functionality of your Navigation System, please check your Navigation System guide.

Overview

The overview shows the available voice commands for the Navigation System. The following lists give further information about the complete command menu available within voice control.

Overview

‘NAVIGATION’

- ‘HELP’
- ‘VOICE ON/OFF’
- ‘REPEAT’
- ‘SCREEN ON/OFF’
- ‘SCREEN AUTO’
- ‘SCREEN DAY/NIGHT’
- ‘SCREEN TWILIGHT’
- ‘HIDE TRAFFIC’
- ‘SHOW TRAFFIC’
- ‘SHOW CURRENT POSITION’
- ‘SHOW DESTINATION’
- ‘SHOW ENTIRE ROUTE’
- ‘SHOW TURN LIST’
- ‘SHOW HEADING UP’
- ‘SHOW NORTH UP’
- ‘ZOOM’^a

a)Can be used as shortcut.

Voice Control

Overview

'NAVIGATION'

'ROUTE SETTING'^a

- 'CLEAR DESTINATION'
- 'DESTINATION HOME'
- 'DESTINATION NAME'
- 'DELETE NAME'
- 'DELETE DIRECTORY'
- 'PLAY DIRECTORY'
- 'STORE NAME'
- 'DETOUR'
- 'DYNAMIC GUIDEANCE ON'
- 'DYNAMIC GUIDEANCE OFF'
- 'DELETE NEXT WAYPOINT'
- 'PREFER SHORTEST ROUTE'
- 'PREFER FASTEST ROUTE'
- 'PREFER MAJOR ROADS'
- 'PREFER MINOR ROADS'
- 'AVOID TOLL ROADS'
- 'PREFER TOLL ROADS'
- 'PREFER FERRIES'
- 'AVOID FERRIES'

a)Can be used as shortcut.

Voice Control

Main functions

Voice on/off

Steps	 USER	 System
1.	'NAVIGATION'	'NAVIGATION'
2.	'VOICE ON'	'VOICE ON'
	'VOICE OFF'	'VOICE OFF'

Repeat

Steps	 USER	 System
1.	'NAVIGATION'	'NAVIGATION'
2.	'REPEAT'	'REPEAT'

Screen settings

Steps	 USER	 System
1.	'NAVIGATION'	'NAVIGATION'
2.	'SCREEN ON'	'SCREEN ON'
	'SCREEN OFF'	'SCREEN OFF'
	'SCREEN AUTO'	'SCREEN AUTO'
	'SCREEN DAY'	'SCREEN DAY'
	'SCREEN NIGHT'	'SCREEN NIGHT'
	'SCREEN TWILIGHT'	'SCREEN TWILIGHT'

Voice Control

Show settings

Steps	 USER	 System
1.	'NAVIGATION'	'NAVIGATION'
2.	'SHOW TRAFFIC'	'SHOW TRAFFIC'
3.	'HIDE TRAFFIC'	'HIDE TRAFFIC'
4.	'SHOW CURRENT POSITION'	'SHOW CURRENT POSITION'
5.	'SHOW DESTINATION'	'SHOW DESTINATION'
6.	'SHOW ENTIRE ROUTE'	'SHOW ENTIRE ROUTE'
7.	'SHOW TURN LIST'	'SHOW TURN LIST'
8.	'SHOW HEADING UP'	'SHOW HEADING UP'
9.	'SHOW NORTH UP'	'SHOW NORTH UP'

Zoom settings

Steps	 USER	 System
1.	'NAVIGATION'	'NAVIGATION'
2.	'ZOOM' ^a	'ZOOM LEVEL PLEASE'
3.	'MINIMUM'	'ZOOM MINIMUM'
	'<a number between 1 and 13>'	'ZOOM <number>'
	'MAXIMUM'	'ZOOM MAXIMUM'

a)Can be used as shortcut.

Voice Control

Route settings

Clear destination

Steps	 USER	 System
1.	'NAVIGATION'	'NAVIGATION'
2.	'ROUTE SETTING' ^a	'ROUTE SETTINGS PLEASE'
3.	'CLEAR DESTINATION'	'CLEAR DESTINATION' 'CONFIRM YES OR NO'
4.	'YES'	'DESTINATION CLEARED'
	'NO'	'COMMAND CANCELLED'

Destination home

Steps	 USER	 System
1.	'NAVIGATION'	'NAVIGATION'
2.	'ROUTE SETTING' ^a	'ROUTE SETTINGS PLEASE'
3.	'DESTINATION HOME'	'DESTINATION HOME'

Destination name

Steps	 USER	 System
1.	'NAVIGATION'	'NAVIGATION'
2.	'ROUTE SETTING' ^a	'ROUTE SETTINGS PLEASE'
3.	'DESTINATION NAME'	'NAME PLEASE'
4.	'<name>'	'DESTINATION <name>'

a)Can be used as shortcut.

Voice Control

Delete Name

Steps	 USER	 System
1.	'NAVIGATION'	'NAVIGATION'
2.	'ROUTE SETTING' ^a	'ROUTE SETTINGS PLEASE'
3.	'DELETE NAME'	'NAME PLEASE'
4.	'<name>'	'DELETE <name>' 'CONFIRM YES OR NO'
5.	'YES'	'DELETED'
	'NO'	'COMMAND CANCELLED'

Delete directory

Steps	 USER	 System
1.	'NAVIGATION'	'NAVIGATION'
2.	'ROUTE SETTING' ^a	'ROUTE SETTINGS PLEASE'
3.	'DELETE DIRECTORY'	'DELETE DIRECTORY' 'CONFIRM YES OR NO'
4.	'YES'	'DIRECTORY DELETED'
	'NO'	'COMMAND CANCELLED'

a)Can be used as shortcut.

Voice Control

Play directory

Steps	 USER	 System
1.	'NAVIGATION'	'NAVIGATION'
2.	'ROUTE SETTING' ^a	'ROUTE SETTINGS PLEASE'
3.	'PLAY DIRECTORY'	'PLAY <DIRECTORY>'

Store Name

Steps	 USER	 System
1.	'NAVIGATION'	'NAVIGATION'
2.	'ROUTE SETTING' ^a	'ROUTE SETTINGS PLEASE'
3.	'STORE NAME'	'NAME PLEASE'
4.	'<name>'	'REPEAT NAME PLEASE'
5.	'<name>'	'STORING NAME' <name> 'STORED'

Detour

Steps	 USER	 System
1.	'NAVIGATION'	'NAVIGATION'
2.	'ROUTE SETTING' ^a	'ROUTE SETTINGS PLEASE'
3.	'DETOUR'	'DETOUR DISTANCE PLEASE'
4.	'<a number between 1 and 100>'	'DETOUR <number>'

a)Can be used as shortcut.

Voice Control

Dynamic guide

Steps	 USER	 System
1.	'NAVIGATION'	'NAVIGATION'
2.	'ROUTE SETTING' ^a	'ROUTE SETTINGS PLEASE'
3.	'DYNAMIC GUIDE ON'	'DYNAMIC GUIDE ON'
	'DYNAMIC GUIDE OFF'	'DYNAMIC GUIDE OFF'

Delete next way point

Steps	 USER	 System
1.	'NAVIGATION'	'NAVIGATION'
2.	'ROUTE SETTING' ^a	'ROUTE SETTINGS PLEASE'
3.	'DELETE NEXT WAY POINT'	'DELETE NEXT WAY POINT'

Prefer route

Steps	 USER	 System
1.	'NAVIGATION'	'NAVIGATION'
2.	'ROUTE SETTING' ^a	'ROUTE SETTINGS PLEASE'
3.	'PREFER SHORTEST ROUTE'	'PREFER SHORTEST ROUTE'
	'PREFER FASTEST ROUTE'	'PREFER FASTEST ROUTE'

a)Can be used as shortcut.

Voice Control

Toll roads

Steps	 USER	 System
1.	'NAVIGATION'	'NAVIGATION'
2.	'ROUTE SETTING' ^a	'ROUTE SETTINGS PLEASE'
3.	'AVOID TOLL ROADS'	'AVOID TOLL ROADS'
	'PREFER TOLL ROADS'	'PREFER TOLL ROADS'

Ferries

Steps	 USER	 System
1.	'NAVIGATION'	'NAVIGATION'
2.	'ROUTE SETTING' ^a	'ROUTE SETTINGS PLEASE'
3.	'AVOID FERRIES'	'AVOID FERRIES'
	'PREFER FERRIES'	'PREFER FERRIES'

a)Can be used as shortcut.

Glossary

Bluetooth mobile phone

Bluetooth refers to a wireless connection between the mobile phone and the vehicle system.

Cradle mobile phone

Cradle mobile phone refers to the wired connection of a mobile phone in the holder (cradle).

Bonded

Before a phone can be connected with the vehicle system, they must be bonded.

Active mobile phone

The term active phone is used for the phone (Bluetooth or cradle) that has been connected to the vehicle system.

Nametag

Nametag is a unique user defined name or phrase which can be used to recall a radio station, dial a phone number or set a route to a navigation memory setting.

Shortcut

Shortcut allows the user to control some vehicle features without having to follow the full command structure menu of the Voice Control.

Declaration of Conformity


We, the party responsible for compliance, declare under our sole responsibility that the Handset Integration product RX-1C is in conformity with the provisions of the following Council Directive: 1999/5/EC. A copy of the Declaration of Conformity can be found at: http://www.nokia.com/phones/declaration_of_conformity/.

NOKIA® | **CE168**
Made in Hungary

e17
020132

Type: RX-1C

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Ford Motor Company is under license. Other trademarks and trade names are those of their respective owners.
Nokia Corporation
Keilalahdentie 4, 02150 Espoo, Finland

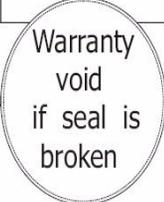	Type: RX-2C	6M2T 19G488 AE Bluetooth Voice Control
		
		
CE434	e17 020157	 0522282/00/123456 YWW

Index

A

- Active phone5, 40
- Audio unit
 - Changing the 'active phone'9
 - Debonding a bonded phone9
 - Dialling a number7
 - Ending a call7
 - Incoming call8
 - Redialling a number7
 - Second incoming call8
- Audio/navigation system
 - Changing the 'active phone'12
 - Debonding a bonded phone12
 - Dialling a number10
 - Ending a call10
 - Incoming call11
 - Redialling a number10
 - Second incoming call .11, 12

B

- Bluetooth Connection3
- Bluetooth mobile phone40
- Bonded40
- Bonding phones3, 5

C

- Cradle4
- Cradle connection3
- Cradle mobile phone40

D

- Declaration of Conformity .41

M

- Mobile phone cradle4
- Mode button6

N

- Nametag16, 40

P

- Phonebook4
- Phonebook categories4

R

- Remote control6

S

- Shortcut40
- Station storage button5

Index

T

Touch Screen

- Changing the 'active phone' 15
- Debonding a bonded phone 15
- Dialling a number 13
- Ending a call 13
- Incoming call 14
- Phonebook 13
- Reading SMS 15
- Redialling a number 14
- Second incoming call . 14, 15
- Writing SMS 15

- Start system 17
- Supported commands 16
- System response 16
- Temperature 27
- Tune frequency 28
- Voice commands 16

V

- Voice button 6
- Voice Control
 - CD Player 24
 - Climate 25
 - Create a phonebook 19
 - Fan speed 26
 - Main navigation functions 33
 - Nametag 16
 - Navigation 31
 - Phone 18
 - Phone directory 20
 - Phone functions 21
 - Phone settings 23
 - Radio 28
 - Route settings 35
 - Short cuts 17

